

DX SYSTEM ADDENDUM 1

Dear Customer

Thank you for purchasing the DX System from Minicom.

Below you will find a list of features that are currently being developed for enhancing the DX System. We will forward to you the updated firmware versions with these features in the near future.

List of future functional features

Feature	See Installation Guide	See Operating Guide
Connecting a local computer to the DX User	Page 6	
Connecting an X-RICC SUN	Page 9	
Connecting an X-RICC USB	Page 10	
Connecting an X-RICC RS232	Page 11	
Connecting a second level DX Central	Page 12	
Connecting a KVM switch without seamless connection	Page 13	
Connecting the DX User to an RS232 Terminal	Page 13	
Power management	Page 13	Page 8,13
Hotkey to Local PC		Page 3
Lock configuration		Page 3
Security High		Page 4
Configuring KVM devices		Page 6
The Cascade Inputs tab elements		Page 10
Adjusting the picture quality		Page 22
Power on/off reboot		Page 23
Private Connect		Page 23
Kickout		Page 23