

Smart CAT5 Switch

8 and 16 Port

Quick Installation Guide



International HQ

Jerusalem, Israel

Tel: + 972 2 535 9666

minicom@minicom.com

North American HQ

Linden, New Jersey

Tel: + 1 908 4862100

info.usa@minicom.com

European HQ

Dübendorf, Switzerland

Tel: + 41 1 823 8000

info.europe@minicom.com

Italy

Rome

Tel: + 39 06 8209 7902

info.italy@minicom.com

1. Introduction

Access and control multiple multi-platform computers from one Keyboard Video Mouse (KVM) console with the Smart CAT5 Switch (Smart CAT5) system. The Smart CAT5 comes in 8 and 16 port models. Connect up to 8 computers to the 8 port model, and 16 to the 16 port model.

2. System components

The Smart CAT5 system consists of:

- Smart CAT5 switch 8 or 16 port
- Remote Interface Connection cables (RICCs) – PS/2, SUN, USB
- CAT5 cables (1.5m provided)
- RS232 Serial cable
- Rack mounts for the Smart CAT5 and the RICCs

3. The Smart CAT5 system configuration

Figure 1 illustrates the basic configuration of the Smart CAT5 system.

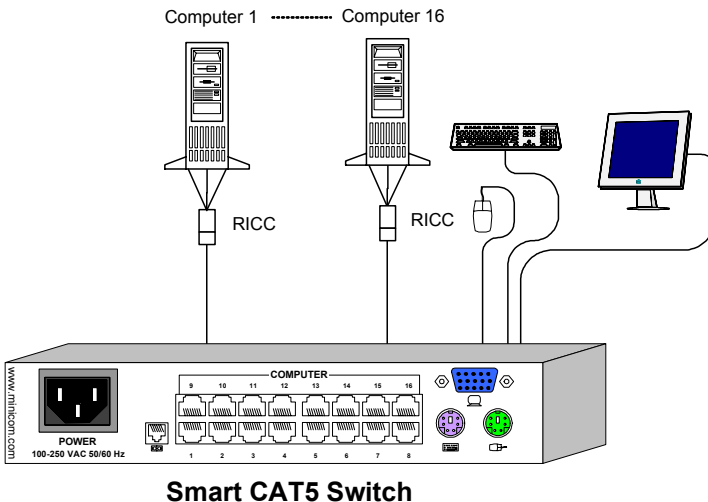


Figure 1 The Smart CAT5 system configuration

Connecting the KVM console

Connect a KVM console to the Smart CAT5 as illustrated in Figure 3 above.

Connecting a RICC to each computer

Connect the 3 types of RICCs as explained below.

Connecting a PS/2 RICC

Figure 4 illustrates the RICC.

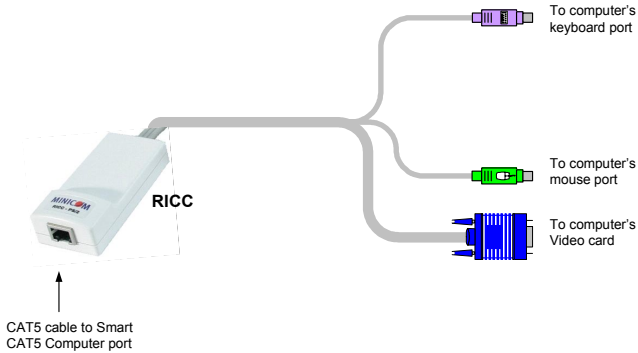


Figure 4 PS/2 RICC

Connecting a SUN RICC

Figure 5 illustrates the SUN RICC and its connections.

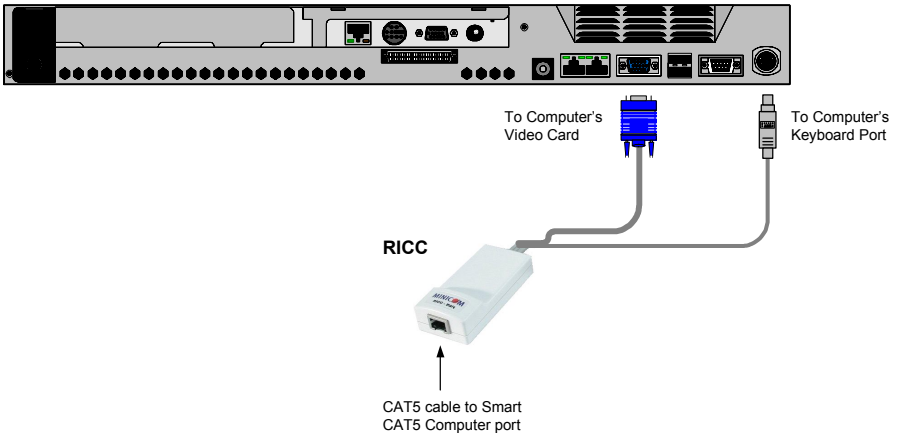


Figure 5 SUN RICC

Connecting a USB RICC

Figure 6 illustrates the USB RICC and its connections.

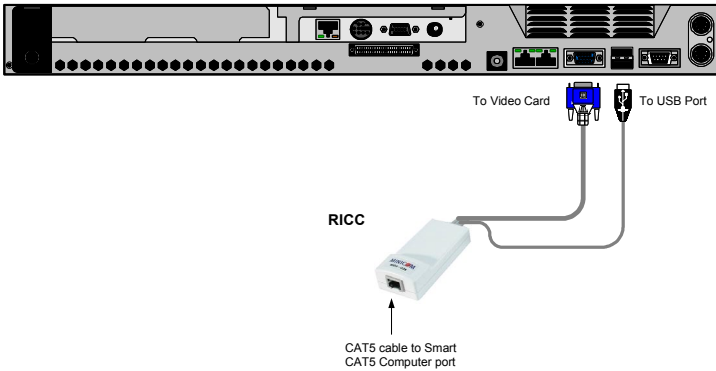


Figure 6 USB RICC

Connecting the CAT5 cables

1. Connect one connector to the RICC's RJ45 port.
2. Connect the other connector to one of the Smart CAT5's Computer ports.
3. Follow the above 2 steps for each computer.

7. Connecting the power supply

1. Connect the Smart CAT5 to the power supply using the Power cable provided. Use only power cord supplied with the unit.
2. Switch on the computers.

8. Resetting the switch

To reset the switch press the 2 front panel Select buttons simultaneously. The RICCs are unaffected by this reset.

9. Operating the Smart CAT5 system

Below is a brief outline of how to switch between computers. See the softcopy User Guide on the Marketing and Documentation CD for the full operating details.

Switch between the connected computers by either

- The front panel Select buttons
- Keyboard hotkeys - To switch to the next computer forwards press **Shift** then, +. Release **Shift**, before pressing +. To switch to the next computer backwards press **Shift** then, -. Release **Shift**, before pressing -.
- Control software (See softcopy User Guide)
- The OSD

The OSD is also the place to adjust various settings as explained in the softcopy User Guide located on the Marketing and Documentation CD.

When switching computers the illuminated LED of the top row indicates which computer is currently selected.

10. The OSD

To display the OSD:

Press **Shift** twice. The OSD Main window appears.

Navigating the OSD

To navigate up and down use the Up and Down arrow keys.

To exit the OSD press **Esc**.

11. Selecting a computer

To select a computer:


1. Navigate to the desired computer line.
2. Press **Enter**. The selected computer is accessed. An OSD label appears showing which computer is accessed.

Note! When the OSD is displayed you cannot select computers using the front panel Select buttons or the keyboard hotkeys.

12. Rack mounting the Smart CAT5

Make sure that the screws used for connecting the bracket to the Smart CAT5 unit, do not exceed 5mm.


Use the L-shaped brackets and screws provided to mount the Smart CAT5 on a server rack as illustrated below.

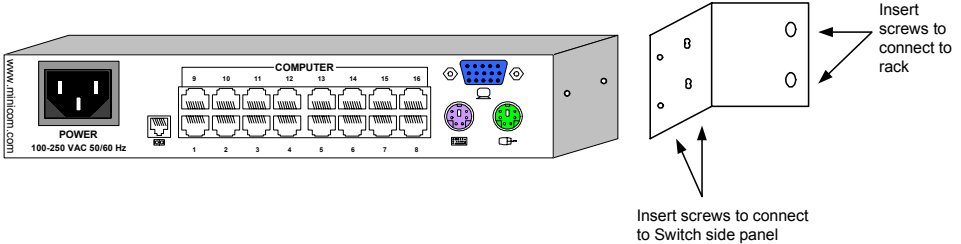

13. Rack mounting the RICCs

You can attach the RICCs to a server rack or computer using the Velcro strips provided. Or connect it using the bracket provided.

The figure below illustrates the bracket.

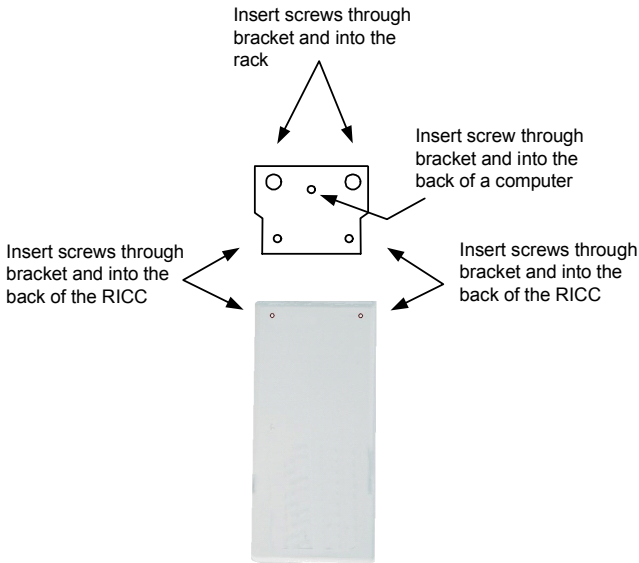

14. USB SUN Combo keys

The connected PS/2 keyboard does not have a special SUN keypad to perform special functions in the SUN Operating System environment. So when a RICC USB or SUN is connected to a SUN computer, the RICC emulates these SUN keys using a set of key combinations called Combo keys. See the table below.

SUN key	Combo key
Stop	Left Ctrl + Alt + F1
Props	Left Ctrl + Alt + F3
Front	Left Ctrl + Alt + F5
Open	Left Ctrl + Alt + F7
Find	Left Ctrl + Alt + F9
Again	Left Ctrl + Alt + F2
Undo	Left Ctrl + Alt + F4
Copy	Left Ctrl + Alt + F6
Paste	Left Ctrl + Alt + F8
Cut	Left Ctrl + Alt + F10
Help	Left Ctrl + Alt + F11
Compose	Application key or Left Ctrl + Alt + Keypad *
Crescent	Scroll Lock
Volume Up	Left Ctrl + Alt + Keypad –
Volume Down	Left Ctrl + Alt + Keypad +
Mute	Left Ctrl + Alt + F12
Sun Left ◊ key	Left Windows key
Sun Right ◊ key	Right Windows key
Alt-Graph	Right Alt or Alt Gr
Stop A	Left Ctrl + Alt +1